


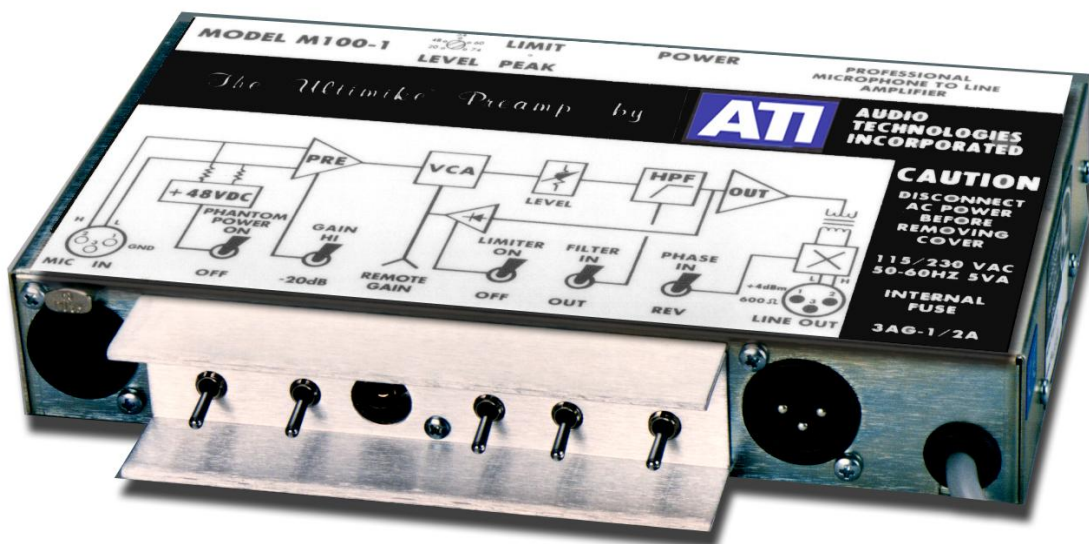

M100

MICROPHONE AMPLIFIER

OPERATING AND MAINTENANCE MANUAL



© Copyright 2011, ATI Audio Inc.

GENERAL

The ULTIMIKE™ M100 Microphone Amplifier is designed specifically to provide the ultimate in no-compromise audio performance. A rugged, small AC line powered amplifier, it may be placed close to the mike on the stage, in the pulpit or in the overhead lighting structures to shorten sensitive low-level mike lines. Replacing your long runs of low-level mike cable with high level feeds will greatly reduce your susceptibility to RF, hash and hum pickup. In addition, the M100 is itself very well protected from both radiated and conducted interference and has unmatched broadband common mode rejection to cancel microphone hum and RF pickup. A unique distortion-free transformer-coupled output provides total isolation of ground loops and ground voltage differentials while simultaneously providing a low driving impedance to minimize high frequency rolloff due to excess cable capacitance.

To allow you to install the M100 close to the mike when necessary in what may be a remote or poorly accessible location, we have designed the preamp to accept a very wide range of input levels (up to 0 dBu) without input overload and we have incorporated a switchable slow acting (but very low distortion) 24 dB limiter to turn down the output level pot when you can't reach it.

In addition to all these modern conveniences, the ULTIMIKE is a superb performer with ruler flat response, no ringing, excellent CMR, exceptionally low input noise and trivial distortion.

The ULTIMIKE amplifier is packed in a rugged, compact steel enclosure. All controls and connectors are recessed for protection. Identification markings are printed on the protected reverse side of a heavy duty polycarbonate overlay. All power supply components are well shielded by the steel chassis.

Input mike level audio to the ULTIMIKE must run a gauntlet of ferrite suppressors, bypass capacitors, DC blocking capacitors and protection diodes designed to block the trash. Transistors (Q1 and Q2) in an instrumentation amplifier configuration provide a very low noise input gain stage. The balanced feedback network R12, R13, R20, and R21 is driven from the outputs of A1A and A2A to eliminate any input loading that might degrade common mode hum rejection and to allow use of low valued feedback resistors for minimum noise generation. Dual constant current stages (Q3 and Q4) sink DC emitter current from Q1 and Q2 and allow complete servo cancellation of input offsets via integrator A3A to maximize input stage headroom at A2B. A differential amplifier and limiter are formed by A1B and A2B. Common mode input signals are nulled out by R27, and an LDR (light dependant resistor) in A2B's feedback loop reduces the input stage gain in response to limiter levels. Even without limiting, the input stage will handle input levels up to 0 dBm (Gain Switch set to HI) or +20 dBm (Gain Switch set to -20 dB).

A3B forms a variable gain stage with a smooth logarithmic adjustment range of +37 to -19 dB. R30, the level potentiometer, is screwdriver-adjustable through the front of the amplifier. When rack mounted, the level adjustment is accessible through the accessory rack mount panel.

A4A makes a switchable, unity gain high pass filter with two-pole response of -3dB at 150 Hz and rolling off 40 dB at 15 Hz. The filter is switched in or out of the circuit with S4.

The output line driver A4B and output transformer T2 provide 16 dB of gain and the total isolation, faraday shielding, RF immunity and ease of use of a true transformer-coupled balanced output. A unique feedback technique totally avoids the transformer's characteristic limitations of high distortion, poor response and hum pickup. Typical output distortion measurements made at both peak (+22 dBm) and nominal (+4 dBm) levels barely exceed generator residuals from 20 to 20,000 Hz. Hum pickup from the power supply is well below the noise level and low frequency response is greatly extended. The output is protected from short circuits but will drive over one-half mile (805m) of shielded cable with less than 1 dB of signal rolloff at 20,000 Hz.

We deliberately omit the output connector pin 1 Ground Lift jumper (W4). If you insist on setting up loops by grounding your cable shields at both ends, you can connect the shield to the output connector plug shell.

A5A and A5B make an active full wave rectifier and filter to drive the limiter. R45 sets a limiting threshold corresponding to an output level of +14 dBm. The limiter has a soft knee and a gentle slope of about 4:1 so that continued peaks greater than 10 dB above the nominal output will cause a slow reduction in gain. If the limiter switch is off, the front yellow LED will light on sustained peaks to tell you to use the limiter or to reduce the gain. With the limiter on, an occasional flash will indicate normal operation but sustained illumination is an indication that you are reaching the end of the gain reduction range.

Q5 is a constant current driver for the limiter LDR, which can be controlled by an external 10 Kohm potentiometer plugged into the phono jack type connector. The remote gain control has an adjustment range of 0 to -15 dB and does not interact with the limiter except that both share the 24 dB total gain reduction range of the LDR. The remote gain control is DC operated and can be located a considerable distance from the M100 without noise pickup.

A5C and A5D form a 40 kHz DC-to-DC converter to efficiently generate the +48 VDC microphone phantom power.

Your M100 operates from an internal, double-filtered bipolar 16 VDC supply, which uses a couple of unique regulated devices called zener diodes. In contrast to fancy three-terminal regulators, these devices will live through power line trash

and transients and simultaneously protect your valuable circuitry. The supply is designed for minimum susceptibility to power line conducted RF and hash with bypassed ferrite beads, RC primary side bypasses and a mu-metal shielded, non-concentric wound, semi-toroidal power transformer. A large board-mounted 1/2A AC line fuse protects your M100 but can make taking off the cover with the AC line still connected a very exciting adventure.

Different types of attachment plugs or line cords may be required for connection to alternate supply voltages.

INSTALLATION

MOUNTING

The M100 can mount to any flat surface with the included angle brackets, which should be mounted to opposite small faces of the M100 by the cover screws. The M100 can be rack mounted either singly or in pairs in only 1RU (1-3/4 inches) using accessory Front Panel Kit, P/N 20273-501.

GROUNDING

The M100 includes an output transformer, a beaded, bypassed and clipped input network, a triple-protected AC input, a double-ground-plane PC board and a well shielded magnetic enclosure. However, in a difficult broadcast application, RF levels may require a better ground path for the RF bypass networks than can be provided by the third wire AC ground. In difficult cases, a separate low inductance studio ground bus tied to the chassis may be necessary.

The power line ground could cause a loop with a separate studio ground. If you are sure your studio ground will provide adequate protection to your personnel in case of an accidental AC short to the chassis, a 3-to-2 adapter can be used to isolate the power line ground. We strongly recommend that the adapter be removed and the power line ground be reconnected prior to any service work requiring removal of the studio ground from the chassis.

INPUT AND OUTPUT CABLES

The female XLR type input connector is wired conventionally with pin 2 HI and pin 1 and the connector housing grounded. When switched on, +48 VDC phantom power is applied to both pins 2 and 3 with reference to ground on pin 1.

The male XLR type output cable connector is wired with pin 2 HI, pin 3 LO and pin 1 floating. The connector housing is grounded to the chassis. Pin 1 is left

ungrounded to prevent large loop currents from circulating through the cable shield if inadvertently grounded at both ends. The shield should be grounded at the receiving end of the signal. If it is absolutely necessary to ground pin 1, ground lift jumper W4 can be inserted into the circuit board.

NOTE

Output transformers which block RF and interrupt ground loops **MUST** be properly loaded in order to provide flat response and minimum overshoot. Always be sure that the output sees a 600 ohm load across pins 2 and 3. An occasional double load (300 ohms) is better than no load.

REMOTE GAIN TRIM CONTROL

A 10 Kohm linear potentiometer can be connected across a single conductor shielded cable with a standard RCA type phono plug at the M100 end. Connect the wiper and one end of the pot together and to the shield, connect the other end of the pot to the center conductor. Decreasing resistance will cause decreasing gain to a limit of approximately -15 dB change. If you use a pot of lower value than 10 K, you will be unable to achieve full gain at maximum resistance. The usable length you can run the remote gain control cable is somewhere between three feet (1m) and one mile (1609m).

MAINTENANCE

There is no routine maintenance required by your ULTIMIKE amplifier. If you have a problem while using the M100, eliminate by substituting the microphone, cables, connectors, load, and AC power and switch positions as possible causes before attacking the M100.

DISASSEMBLY

1. Remove AC power.
2. Remove nine Philips head screws.
3. Pull off switch protector bracket.
4. Unlock both XLR connector PC board-mounted center inserts from their cover mounted outer shells using an .090 wide screwdriver placed into an access hole located above the three terminals in each insert. Give each 1/8 turn CCW to unlock; slot is horizontal when locked. **DO NOT FORCE.**
5. With your thumbs on the connector inserts and your fingertips on the sides of the cover, gently slide the cover forward until the connector shells clear the inserts. Lift the cover clear and pull the line cord grommet clear of the cover.
6. Reassembly is the reverse of the above. Don't forget the grommet.

ADJUSTMENTS

Avoid the temptation to adjust the internal trimpots R27 and R40 just to see what affects they cause. Both are sharp null type settings, which are greatly degraded by even slight misadjustment. Replacement of any semiconductor in the unit should not require pot readjustment.

COMMON MODE REJECTION

Replacement of R6, R7, R8, R9, R62, C11, or C12 will require readjustment of R27 to maintain maximum common mode rejection (CMR). To set R27, apply 10 Vrms at 60 Hz between ground pin 1, pin 2, and pin 3 (tied together) of XLR input J1. Measure output (at J2 pins 2 to 3) and adjust R27 for null. A 90 dB CMR is attainable but may be difficult to measure without a tuned voltmeter.

DISTORTION

Replacement of R36, R37, R38, R39, and R40 or output transformer T2 will require readjustment of R40. Apply sufficient 20 Hz signal to the input with the gain switch at -20 dB and the gain control set to 12 o'clock to drive the loaded output to +20 dBm. Measure Total Harmonic Distortion (THD) at the output and adjust R40 for the best null. If you cannot detect a good null, your audio generator may well have more internal distortion at 20 Hz than even the untrimmed contribution of the M100, which is typically less than .25%. When properly set, using superior test equipment such as Amber or Audio Precision, distortion measurements should be limited only by residual white noise to levels of .03% across the audible band.

GENERAL

Power supply voltages are + and - 16 VDC nominal. IC output DC voltages under no signal, shorted input conditions should read 0 VDC at A1 and A2, pins 1 and 7, A3-7, A4 pins 1 and 7 and A5, pins 1 and 7. A3 pin 1 should read within the range of + to - 10 VDC and a 28 Vp-p square wave should be visible with an oscilloscope at A5, pins 8 and 14. Deviations of more than .1 VDC from the 0 VDC nominal is an indication of IC or circuit problems. Ten years from now, we recommend replacing all aluminum electrolytic capacitors. Keep 250 Watt soldering guns out of the M100.

230 VAC OPERATION

The M100 is wired for 115 VAC, 50/60 Hz operation unless otherwise requested at the time of ordering. It can be modified for 230 VAC use by removing jumpers W1 and W2 and inserting a jumper wire in W3.

TECHNICAL SPECIFICATIONS

GAIN	54 dB nominal, adjustable 0 to 74 dB
NOMINAL LEVELS	-50 dBm / 150 ohms available input power +4 dBm / 600 ohms output
PEAK LEVELS	-32 dBu in, +22 dBm out
MAXIMUM INPUT	0 dBu, HI gain switch; +20 dBu, LO gain switch
NOISE OUTPUT	-70 dBm, 20 to 20,000 Hz measurement bandwidth
HUM OUTPUT	-80 dBm, 60, 120, and 80 Hz
DYNAMIC RANGE	92 dB, peak output to noise
HARMONIC DISTORTION 20 to 20,000 Hz	.10% THD maximum at peak level .03% THD maximum at nominal level
INTERMOD DISTORION	.005% maximum SMPTE 7K / 60 Hz 4:1
FREQUENCY REPNSE 20 to 20,000 Hz	+0, -.25 dB -3 dB at 1 Hz and 65 kHz
HIGH PASS FILTER	-3 dB at 150 Hz nominal, -40 dB at 15 Hz
INPUT HUM REJECTION	90 dB minimum CMR, internal adjustment
INPUT IMPEDANCE	40 kohm, balanced
OUPUT IMPEDANCE	Transformer balanced, 40 ohms source impedance, 600 ohms \pm 10% load impedance
OUTPUT RISE TIME	6 μ Sec symmetric rise and fall times, typical
OUTPUT OVERSHOOT	5% maximum
PHASE SHIFT	30 degrees maximum input to output, 20 to 20,000 Hz

COMPRESSOR THRESHOLD	+14 dBm out \pm 1 dB
COMPRESSOR SLOPE	4 : 1 maximum
COMPRESSOR TIMING	100 mSec attack and recovery
COMPRESSOR RANGE	20 dB gain reduction minimum
REMOTE GAIN TRIMMER	10 kohm linear external pot, user supplied DC control, 0 to -15 dB range
PHANTOM POWER	+48 VDC at 4 ma through paralleled 6.8 kohm resistors
AC POWER	115 – 230 VAC \pm 10%, 47 to 63 Hz, 4 VA Voltage selection via internal wiring change
DIMENSIONS	1.5" (3.8) H by 8.5" (21.6cm) W by 5.5" (14cm) D; 9.75" (24.8cm) W with mounting brackets
SHIPPING WEIGHT	4 lbs. (1.8kg)
ENCLOSURE	Plated steel wraparound with reverse printed graphics overlay and rugged switch protector
MOUNTING	Keyhole slot #8 screws on 9-1/8" (23.19cm) centers
ACCESSORY 1RU RACK MOUNT	20273-502 (holds 1 or 2 units)
CONNECTORS	Mike input: XLR Type, three terminal, female Line output: XLR type, three terminal, male Remote Gain Trimmer: RCA type Phone Jack

One Year Limited Warranty

ATI warrants this product to be free from defects in materials and workmanship to its original owner for a period of one year from date of purchase. ATI will repair or replace such product or part thereof, which upon inspection by ATI, is found to be defective in materials or workmanship.

The Proper Return Authorization Number must be obtained from ATI in advance of return. Contact ATI at 856-626-3480 or email sales@atiaudio.com to receive the number and instructions for return of your unit.

A written statement providing the name, address, daytime telephone number and email address of the original owner, together with receipt from the original purchase, and a brief description of any claimed defects, must accompany all returns. Parts or product for which replacement is made shall become the property of ATI.

The customer shall be responsible for costs of transportation and insurance to the factory of ATI, and shall be required to prepay such costs.

ATI shall use reasonable efforts to repair or replace any product covered by this limited warranty within thirty days of receipt. In the event repair or replacement shall require more than thirty days, ATI shall notify the customer accordingly. ATI reserves the right to replace any product that has been discontinued from its product line with a new product of comparable value and function.

This warranty shall be void in the event a covered product has been damaged, or failure is caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, or lightning, power fluctuations and other incidental or environmental conditions. Further, product malfunction or deterioration due to normal wear is not covered by this warranty.

ATI DISCLAIMS ANY WARRANTIES, EXPRESS OR IMPLIED, WHETHER OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR USE, EXCEPT AS EXPRESSLY SET FORTH HEREIN. THE SOLE OBLIGATION OF ATI UNDER THIS LIMITED WARRANTY SHALL BE TO REPAIR OR REPLACE THE COVERED PRODUCT, IN ACCORDANCE WITH THE TERMS SET FORTH HEREIN. ATI EXPRESSLY DISCLAIMS ANY LOST PROFITS, GENERAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHICH MAY RESULT FROM BREACH OF ANY WARRANTY, OR ARISING OUT OF THE USE OR INABILITY TO USE ANY ATI PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitation on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

ATI reserves the right to modify or discontinue, without prior notice to you, any model or style product.

If warranty problems arise, or if you need assistance in using your product contact us.